
Anytime	# Skip / Enter / bypass a greeting / interrupt a prompt  O Help	
	Cancel or backup one menu	ı
1 Review	During Message	After Message
Messages	1 Rewind (a few sec)	4 Replay
	1 1 Rewind to start	5 Message Details
1 1 Unread	2 Pause / Resume	6 Forward (with intro)
1 2 Read	3 Fast Forward (a few sec)	6 1 Forward (without intro)
1 3 Saved	3 3 Fast Forward to end	6 6 Forward (rmv prev intros)
	4 Slow Playback	7 Delete
	4 4 Slowest Playback	8 Reply
	6 Fast Playback	8 8 Call Sender
	6 6 Fastest Playback	9 Save
	7 Delete	More Options
	# Skip to the next message	# Skip to the next message
2 Send	Step 1: Record Message	Hear delivery options
Messages	when finished press #	0 1 Private
	Step 2: Address Message	0 2 Important
	<ul> <li>Enter a mailbox number</li> </ul>	0 4 Future Delivery
	Spell a name or distribution	6 Add more recipients
	list	★ Cancel
	<ul> <li>Say a name or distribution</li> </ul>	# Send
	list	
4 User	1 Features	
Preferences 1 1 Notify Me (on/off) (*Must be configured by administrator)		e configured by administrator)
	1 4 Reach Me (on/off) (*Must be configured by administrator)	
	2 Administrative Options	
	2 1 Password	
	2 4 Date and time playback (on/off) (*default is set to on)	
	3 Greetings	
	3 1 Personal Greeting	
	3 1 1 Standard system greeting (*Will allow you to select the default greeting)	
	3 1 2 Record personal greeting (*Will allow you to record a personal greeting)	
	3 1 2 1 Away from phone	
	3 1 2 2 Busy	(*Must be configured by administrator)
	3 2 Extended absence (*Caller of	can not skip greeting)
	3 3 Name	
5 Restart		
* Exit		

## Avaya IP Telephone User Guide 1120E / 1140E

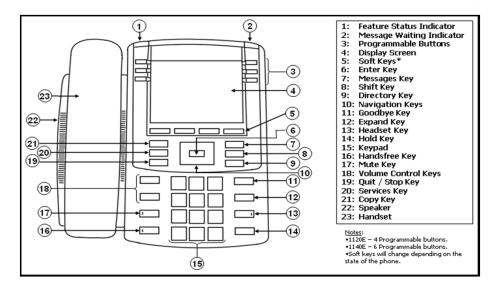



#### **PHONE / EXTENSION NUMBERS**

- External 4-digit phone numbers (DID Direct Inward Dial)
  - 2500 to 2899 (934-2500 to 934-2899)

#### **PLACING CALLS**

- Dial Tone Lift handset or press *Handsfree*, *Headset*, or *Line* button and dial appropriate number.
- Predial Dial number you wish to call then lift handset or press Handsfree, Headset, or Line button.
- Internal Calls Dial 4-digit extension number
  - When calling another UH Campus, please dial 9+ 7 digit number. No 808 / 1808 is necessary.
- External Calls Dial 9 + telephone number
- Emergency Calls All phones are able to dial 911 or 9+911

## ANSWER CALLS

- Lift handset or press *Handsfree, Headset*, or incoming *Line* button.

## **MULTIPLE CALL APPEARANCE**

- Provides you or others with a multiple appearance of an extension. The Multiple Appearance can be on the same phone or another phone.
- Both appearances can be used as a regular extension.
- Place and receive calls as normal.

## **INTERCOM (VOICE)**

Place A Call:

- Get dial tone and press the Intercom key
- Dial the desired intercom number of the party you want to reach
- Start speaking (speaker is activated on called phone)

Receive A Call:

- Hear one ring then callers voice speaking a message.
- Lift receiver or press Handsfree button to respond to call

#### **END CALL**

- Place handset on cradle or press the Goodbye button.

#### SWITCH FROM HANDSET TO HANDSFREE AND BACK

- While on a handset call, press the *Handsfree* button and place handset in cradle.
- While on a Handsfree call, lift handset.

#### **CALL HOLD**

- Press the *Hold* button.
- To return to call... press the flashing line key.

Note: When answering a second call on your phone, selecting a flashing line key will automatically put the first caller on hold.

#### **MUTE**

- Press Mute (LED light flashes red: you can not be heard)
- Press lit Mute (LED light is off: you can be heard)

Note: This feature works with handset, handsfree, or headset calls.

## LAST NUMBER REDIAL

- Get Dial tone
- Press line button

#### **CALL TRANSFER**

- While on an active call press the *Trans* soft key (caller is put on hold you get dial tone)
- Dial number you wish to transfer caller to
- Announce Call (optional this is NOT a 3-way call, you are speaking to the 2nd party)
- Press the *Trans* soft key to complete transfer. (You are removed from call)
- Press the **Conf** soft key to establish a conference call.

Note: If party you called is not available (busy, no answer, misdial), press the goodbye key to hang up with the called party then select the line key you wish to be connected to.

# Avaya Aura Messaging (Voice Mail)



#### **ACCESSING VOICE MAIL**

- From a phone on the system
  - Dial voice mail extension (2886) or press the Messages key.
  - At the prompt press # (to access your mailbox)
  - Enter password followed by the # key. (86245 = temporary password).
- From an outside line
  - Dial 934-2886, the direct number to voicemail, you reach the system greeting.
  - -or- Dial your DID number to reach your greeting.
    - During your greeting, press \* \*, to get to the system greeting.
  - At the system greeting press the # key.
  - Enter your 7-digit mailbox number followed by the # key.
  - Enter your password followed by the # key.

#### **HOW TO LEAVE A VM WITHOUT RINGING PHONE**

- Access Voicemail system (press messages button or dial VM extension)
- At the prompt, dial the 7-digit mailbox number of the party you wish to leave a message for.

Note: You can also transfer a caller into someone's voicemail by using the above with the transfer feature.

## **NOTES:**

- The voice mail system assumes you are the owner of the extension you are calling from and will ask you for the password.
- The voice mail system has voice prompts that will walk you through the system.
- You will be forced through an enrollment process the first time you log in to the system (Change Password, Record Name, Select Greeting -Standard System Greeting / Personal Greeting).
- Your temporary password is 86245.
- Minimum password length is 4-digits, trivial passwords are not allowed.
- To bypass a greeting or interrupt a prompt, press #.
- Passwords do not expire.
- You can have up to six invalid login attempts then your mailbox will be disabled. You can have three invalid login attempts per session.
- \*\*\* See Voice Mail Commands page for commands available while maneuvering through the system.

#### **CONFERENCE**

- While on an active call press the *Conf* soft key (caller is put on hold you get dial tone)
- Dial number you wish to conference with.
- Consult with the called party (you can speak privately with the called party).
- Press the **Conf** soft key to conference all parties.

#### Notes:

- If party you called is not available (busy, no answer, misdial), press the goodbye key to hang up with the called party then select the line key you wish to be connected to.
- You may be able to conference up to six parties by repeating the steps
- The conference call remains up if you disconnect from call.

### **CALL FORWARD**

#### To Set:

- Press the **Fwd** soft key.
- Dial number to forward calls to. (press Fwd again to forward calls to the last forwarded number)
- Press the **Fwd** soft key to set
- CFWD shows on display to indicate that the primary line(s) is/are forwarded.

#### To Cancel:

- Press the Fwd soft key.
- Press the Cancel soft key. (display shows cancelled)

## **CALL PICKUP (RINGING NUMBER)**

- Get dial tone
- Dial Flexible Feature Code (FCC): #8
- Call is redirected to your line.
- Service call.

#### Notes:

- You can only pick up extensions programmed in your pickup group.
- If multiple phones are ringing, you pick up the longest ringing call.

#### **DIRECTORY (If Available)**

Callers List - Stores incoming calls (100 entries)

Redial List - Stores outgoing calls (20 entries)

- Press Callers or Redial soft key or use the Directory button and navigate to Callers list or Redial list followed by pressing the Select soft key.
- Use navigation buttons to scroll up/down list.
- Press the Dial soft key to dial number.
- Press the *Edit* soft key to edit the number. Used to add "9" for an outside #.
- Press the **Copy** soft key to copy the entry to your Personal Directory (below).
- Press the **Del** soft key to delete the entry. Press the **Yes** soft key to confirm.
- Press the Quit button to exit Call Log.
- \*\* To Delete the entire list press the **Del** soft key at the Callers/Redial list main menu and press the **Yes** soft key to confirm.

<u>Personal Directory</u> - Allows you to store 100 entries of personal numbers.

- Press the *Directory* button.
- Navigate to Personal Directory selection and press the **Select** soft key.
   Add an entry:
  - Press the **Add** soft key.
  - Enter the name for entry using the keypad.
  - Press the **Next** soft key.
  - Enter the number for the entry using the keypad. Enter "9" if needed.
  - Press the **Done** soft key to store the entry.

#### Edit an entry:

- Use your navigation keys to select the desired entry to edit.
- Press the **Edit** soft key.
- Make the necessary changes.
- Press the **Done** soft key to save the entry.

## Delete an entry:

- Use your navigation keys to select the desired entry to delete.
- Press the **Del** soft key.
- Press the *Confirm* soft key to delete the entry.

## Search for an entry:

- Use your navigation keys to select the desired entry.
- Press the *Dial* soft key to call the stored number.

## Copy entries to your Personal Directory:

 Press the Copy key to copy entries from other lists such as the Caller List and Redial List.

#### **OPTIONS**

- Press the Services button
- Use navigation button to select Telephone Options and press the Select soft key.

#### Adjust Volume:

- Navigate to the Volume adjustment option and press the Select soft kev.
- Use the up/down navigation keys to select item to adjust, then press the Enter key. (Ringer, Handset, Handsfree, Headset, or Buzzer)
- Use the *Up / Down* soft keys or *Up / Down Navigation* keys to adjust volume.
- Press **Select** to save changes.

#### Adjust Screen Contrast:

- Navigate to the Screen Contrast option and press the **Select** soft key.
- Use the *Up / Down* soft keys or *Up / Down Navigation* keys to adjust contrast.
- Press **Select** to save changes.

#### Ring Type:

- Navigate to the Ring Type option and press the **Select** soft key.
- Use the up/down keys to select ring.
- Press *Play* to preview the ring tone.
- Press **Stop** to stop playing the ringing tone.
- Press **Select** to store the ring tone.